

Sezione del conduttore Cross-section of the conductor Section du conducteur Doorsnede van de ader Querschnitt des Leiters Sección del conductor Seção do condutor	Distanza MAXtra trasformatore Art. 1195 e posto esterno. Max. distance between transformer Art. 1195 and external unit. Distance MAX entre le transformateur Art. 1195 et la plaque de rue. MAX. afstand tussen transformator art. 1195 en entreepaneel. Maximaler Abstand zwischen dem Transformator Art. 1195 und der Außenstele Distancia MAX entre el transformador Art. 1195 y unidad externa. Distância máxima entre Transformador Art. 1195 e posto externo
	F
0,28 mm <sup>2</sup> (Ø0,6 mm)	4 m
0,5 mm <sup>2</sup> (Ø0,8 mm)	10 m
1 mm <sup>2</sup> (Ø1,2 mm)	20 m
1,5 mm <sup>2</sup> (Ø1,4 mm)	30 m
2 mm <sup>2</sup> (Ø1,6 mm)	40 m

